

Overview Fixed gas warning systems



	GMA41	GMA44	GMA43	GMA81	GMA84	GMA88	GMA83	GMA103	GMA101	GMA104	GMA301	GMA304
Mounting	DIN-rail mounting			Wall mounting				19" Rack mounting				
Channels	1	4	3	1	4	8	3	3	1	4	1	4
Digital display	X	X	X	X	X	X	X	X	X	X	X	X
Bargraph	/	/	/	/	/	/	/	/	/	/	X	X
Data logger	/	/	/	/	/	/	/	/	/	/	X	X
Online Data transfer	/	/	/	/	/	/	/	/	/	/	X	X
Signal output 0-10 V	/	/	/	/	/	/	/	/	/	/	X	/
Signal output 4-20 mV	X	/	/	X	/	/	/	/	X	/	X	/
Signal output digital	/	/	/	/	/	/	/	/	/	/	X	X
Alarms	3 treshold alarms can be set individually		Single alarm for each Transmitter	3 treshold alarms can be set individually			Single alarm for each Transmitter		3 treshold alarms can be set individually		3 treshold alarms and Delta-Alarm can be set individually	
Configuration	Via keypads (in service menu) or via PC or notebook										Via keypads (in service mode) and dip-switches (on board)	
Relay outputs	3 relays for alarms, 1 relay for fault can be configured as NC/NO contacts											